

TB 5400 B
TABLE BLENDER



Believe in better

A stylized icon of a telephone handset inside a speech bubble shape.

Customer Care Line
(after sales service)

086 100 3339

Small appliance
Instruction manual

Please read this user manual first!

Dear Customer,

Thank you for preferring a Defy product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, include the user manual too. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



WARNING: Warnings for dangerous situations concerning the safety of life and property.



Suitable for contact with food.



Do not immerse the appliance, power cable, or power plug in water or any other liquids.



Protection class for electric shock.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

This appliance conforms to the WEEE regulation.

It does not contain PCB.
Made in P.R.C

CONTENTS

1 Important safety and environmental instructions 4

1.1 General safety.....	4
1.2 Compliance with the WEEE Directive and disposal of waste products	7
1.3 Package information.....	8
1.4 Things to do for energy saving	8

2 Your blender 9

2.1 Overview	9
2.2 Technical data	10

3 Operation 11

3.1 Intended use	11
3.2 Operation	11
3.3 Grinder.....	13
3.4 Fruit Filter (TB 5400 B)	13
3.5 Stirrer	14

4 Cleaning and care 15

4.1 Cleaning	15
4.2 Storage	16
4.3 Handling and transportation	16

1

Important safety and environmental instructions

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

1

Important safety and environmental instructions

- This appliance can be used by people who have limited physical, sensory or mental capacity or who do not have knowledge and experience, provided that they are supervised or they understand the instructions with regard to safe use of the product and potential dangers.
- Children should not play with the appliance.
- Cleaning and maintenance works should not be performed by children.
- This appliance cannot be used by children.
- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.
- Unplug the appliance when left unattended, while installing/removing accessories or before cleaning.
- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- Do not use the device for hot food.

1

Important safety and environmental instructions

- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not pull the power cable when unplugging the appliance.
- Unplug the appliance before cleaning, disassembly, accessory replacement and wait for it to stop completely.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use the plastic section trying to hold the chopping blade.
- Never touch blades while using the appliance. There is the possibility of injury due to incorrect usage.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.

1

Important safety and environmental instructions

- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- If you keep the packaging materials, store them out of the reach of children.
- Keep the appliance and the power cable out of the reach of children.

1.2 Compliance with the WEEE Directive and disposal of waste products



This product does not include harmful and prohibited materials specified in the "Regulation for Supervision of the Waste Electric and Electronic Appliances" issued by the Ministry of Environment and Urban Planning. Complies with the WEEE Regulation. This appliance has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose the appliance with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Ask the local authority in your area for these collection points. Help protect the environment and natural resources by recycling used products.

1

Important safety and environmental instructions

1.3 Package information



Package of the product is made of recyclable materials in accordance with our national legislation. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.4 Things to do for energy saving

Cut the solid food into small pieces before placing them in the appliance as stated in the user manual. Follow the other instructions and times specified in the manual. Select low speed levels if suitable for the food to be prepared. Switch off and unplug the appliance after using it.

2 Your blender

2.1 Overview



The values which are declared in the markings affixed on your product or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

2 Your blender

1. Cap/Measuring cup
2. Lid
3. Jug
4. Glass jug (TBN5502)
5. Jug handle
6. Blade unit
7. Motor housing
8. Control dial
9. Non-slip feet
10. Cable storage coil

2.2 Technical data

Voltage: 220-240V~,50-60Hz

Power: 400 W

Insulation class: II

Technical and design modifications reserved.

3 Operation

3.1 Intended use

This appliance is intended only for household use; it is not suitable for professional use.

It is designed to chop small amounts of vegetables and fruit (strawberries, bananas, etc.).

3.2 Operation

Clean the appliance parts before initial use (see 4.1).

Remove all packaging and stickers materials and dispose of them according to the applicable legal regulations.



WARNING: Do not operate the appliance when it is empty or its cover is open.

1. Place your appliance on a solid and flat surface.
2. Now set the jug with the opening facing down on a level surface.
3. Assemble the blade unit carefully on the jug by turning it clockwise and lifting it by holding it from the sides of the unit.



WARNING: Do not remove the blade unit by lifting it from the blades.



WARNING: The blade unit is very sharp! Handle the blade unit with utmost care, especially during cleaning, in order to avoid injuries.

4. Cut the food into small pieces and put it in the jug.
5. Close the lid by turning it clockwise. Make sure that the cap/measuring cup is inside the lid opening and is secured.
6. Place the jug onto the motor housing by turning it clockwise.



WARNING: Make sure that the notches on the bottom of the jug fit those in the motor housing.

7. Connect the power plug to a suitable power outlet.

3 Operation

8. The cutting speed can be variably adjusted with the control dial.



To operate the blender at the low speed, turn the control dial to "1". If you want to blend with a higher speed, turn the control dial to the speed level "2".



For short pulses of blending with a high speed, turn the control dial to "P". When you release the control dial, the blender will stop and return to "0" automatically.



If ingredients are to be added during the blending process, then add them through the opening in the lid. To do this, take out the cap/measuring cup.

9. After the desired consistency of the blended food has been reached, turn the control dial to 0 to switch off the blender.



WARNING: Never run the blender for longer than 1 minute, otherwise it would overheat. After running the appliance for 1 minute, let it cool down before using it again.

10. Take the jug off from the motor housing by turning the jug counterclockwise and open the lid.

11. Take off the lid and pour the mixture into glasses or other containers.



Mix 3 units of hard food and 2 units of water in order to have a smooth jug blender experience. (i.e: 60 gr hard food 40 ml water)

3 Operation

12. Close the lid by turning clockwise. Make sure that the cap/measuring cup is inside the lid opening and is secured.

3.3 Grinder

1. Place your appliance on a solid and flat surface.
2. Put the coffee beans (max. 50 g, to be in the grinder jug.
3. Assemble the blade unit carefully on the grinder jug by turning it counterclockwise.
4. Place the grinder jug onto the motor housing.
5. Connect the power plug to a suitable power outlet.
6. The cutting speed can be variably adjusted with the control dial.



To operate the blender at the low speed, turn the control dial to "1". If you want to blend with a higher speed, turn the control dial to the speed level "2".

7. After grinding, turn the control dial to 0 to switch off the blender.

8. Set the grinder with the opening facing down on a level surface and remove the blade unit by turning it counterclockwise.



WARNING: Never run the blender for longer than 30 seconds, otherwise it would overheat. After running the appliance for 1 minute, let it cool down before using it again.

3.4 Fruit Filter (TBN5400/TBN5500)

The fruit filter is for fresh fruit juices and cocktails. It prevents pips and skins from your drink.

1. Fit the filter into the middle of the jug.
2. Cut the fruit into small pieces and put it in the fruit filter.

3 Operation

3. Close the lid of the jug by turning it clockwise. Make sure that the cap/ measuring cup is inside the lid opening and is secured.
4. Connect the power plug to a suitable power outlet.
 - The cutting speed can be variably adjusted with the control dial.
5. After the desired consistency of the blended fruit has been reached, turn the control dial to 0 to switch off the blender.
6. Take the jug off from the motor housing by turning the jug counterclockwise and open the lid.
7. Take off the lid and pour the fruit juice into glasses or other containers.

3.5 Stirrer

The stirrer can be used for blending mixtures or frozen ingredients.

Place the stirrer into the lid hole. Use the stirrer during the operation by moving it anti clockwise.

4 Cleaning and care

4.1 Cleaning

1. Unplug the appliance before cleaning.
2. Wait for the accessories used to stop completely.
3. Remove the blade unit from the jug after removing the jug (1) from the appliance (see. 3.2).
4. Clean the residual food in the jug (1) under running tap water.
5. After installing chopping accessory into the jug (1), replace the jug on the body (4).
6. Completely fill or fill half of the jug (3) with warm water and some drops of dish-washing liquid and operate the appliance in highest speed for a couple of seconds.
7. Then remove and rinse the jug.

**WARNING:**

Chopping blade (2) is sharp. Do not hold the sharp edge or immerse in water while cleaning.



WARNING: Never use petrol, solvents, abrasive cleaners, or metal objects and hard brushes to clean the appliance.



WARNING: Do not immerse the body (4) in water. You can wipe it with a damp cloth.

4 Cleaning and care

4.2 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance before lifting it.
- Store the appliance in a cool and dry place.
- Keep the appliance and cable out of the reach of children.

4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.

Branches

If you have followed the instructions and still have a problem, contact the customer care line on 086 100 3339. They will be able to advise you on any aspect of the appliance.

South African Branches:

BLOEMFONTEIN

Unit Number 5
Monument Business Park
50 Monument Road
Oranjesig, Bloemfontein
Bloemfontein.Service@defy.co.za

CAPE TOWN

5A Marconi Rd. Montague Gardens, 7441
CapeTown.Service@defy.co.za

DURBAN

135 Teakwood Road, Jacobs,
Durban, 4052
Durban.Service@defy.co.za

EAST LONDON

Robbie de Lange Road, Wilsonia,
East London, 5201
EastLondon.Service@defy.co.za

GAUTENG, MIDRAND

127 15th Road, Cnr Pharmaceutical & 15th Rd,
Midrand, Gauteng
Gauteng.Service@defy.co.za

POLOKWANE

87 Nelson Mandela Drive, Superbia 0699
Polokwane.Service@defy.co.za

PORT ELIZABETH

112 Patterson Road, North End, Port Elizabeth
6001
PortElizabeth.Service@defy.co.za

Sub-Saharan Africa Branches:

ZAMBIA: SOUTHGATE INVESTMENTS LTD

Plot 1606, Sheki Sheki Road
P.O. Box 33681
Lusaka, 10101, Zambia
Tel: +260 0211 242332/3
Fax: +260 0211 242933
sqiservicecentre@microlink.zm

NAMIBIA: ATLANTIC DISTRIBUTORS (PTY) LTD

10 Tienie Louw Street, Northern Industrial Area
P.O. Box 21158, Windhoek, Namibia
Tel: (061) 216162
Fax: (061) 216134
atlantic@mweb.com.na

ZIMBABWE: TRADECOMAFRICA

Trade Com Africa, 183 Loreley Crescent
Msasa, Harare, Zimbabwe
Tel: +263 4 486165/6
Cell: +263 772 469010
Cell: +263 772 469011

BOTSWANA: RAY MORGAN AGENCIES

RMA Service Centre, Plot 48, East Gate
Gaborone International Commerce Park
Kgale View, Gaborone
Botswana
Tel: +267 390 3996 / 390 3912
Fax: +267 318 7376
Cell: +267 7134 6539
service@rma.co.bw; raja@rma.co.bw

SWAZILAND: LYND'S DISTRIBUTORS

P.O Box 716, Mbabane, Swaziland, H100
Tel: (00268) 2515 4310/8
Fax: (00268) 2518 4318

MOZAMBIQUE: COOL WORLD. LDA

Rua da Resistencia No. 97B R/C
Cell: +258 84 44 61 234
coolworldlda@hotmail.com
Nosso Show Room
Av: da Industrias, Parcela No.735 * 735A
Machava, Maputo

Warranty

This certificate is issued by DEFY APPLIANCES (PTY) LIMITED manufacturers of Defy and Ocean products, hereinafter the Company, to the original purchaser only, of the appliance described on the certificate and shall constitute the only warranty given in respect of this appliance.

The Company warrants to the original purchaser that for a period of TWO YEARS from date of purchase the appliance is free from defect under normal domestic use, both in workmanship and material, subject to the following conditions.

1. Carry-in service. Small appliances are repaired in our service centres and are not collected from the customers home. Faulty units must be delivered to the purchasing dealer or to the nearest Company Service Centre for warranty repairs.
2. Vitreous enamelware, fuses and lamps are specifically excluded from these warranties. It is an express condition of these warranties that the purchaser takes due care and attention in the use and maintenance of the appliance. Abuse, misuse in conflict with operating instructions, connection to incorrect voltages and subjection to commercial use shall release the Company from its obligations.
3. This warranty shall become void and cease to operate if the appliance is dismantled by, or any repairs to the appliance are effected by any persons not duly authorised by the Company, or if substitute parts not approved by the Company are used in the appliance, or if the serial number of the appliance is removed.
4. The Company shall not be responsible for damages resulting from fire, flood, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance. The Company shall not be responsible for damages caused by insect and/or animal infestation.
5. The Company shall not be responsible for transportation or other costs other than those incurred within the provisions of Point 1 of this Certificate.
6. **For warranties in the Republic of South Africa and Sub-Saharan Africa, please contact the customer care line. Please refer to the previous page for respective South African branches and Sub-Saharan Africa branches.**
7. Where service is requested under warranty and no fault or defect can be found by the Company, all costs incurred will be for the purchaser's account.
8. This Certificate as well as your invoice will serve as proof of purchase. For the purpose of warranty, it will be essential to produce this Certificate and invoice. Failure to do so, will render the purchaser liable for service costs.

**KEEP THIS CERTIFICATE AND SALES INVOICE AS PROOF OF
PURCHASE FOR WARRANTY PURPOSES.**