

**TA 828 R  
TOASTER**



Believe in better



**Customer Care Line**  
(after sales service)

086 100 3339

**Small appliance**  
Instruction manual

## Read this manual before operation of the appliance!

### Dear Customer,


Congratulations on the purchase of your new Defy appliance!

Please read this manual carefully before using your appliance for the first time and then store it within easy reach for future reference. We trust you will enjoy years of trouble free use.


### The user manual:

- This manual will provide you with information on how to safely operate and care for your appliance in order that you gain the maximum benefit from it.
- Pay particular attention to any safety instructions.

## Controls and parts

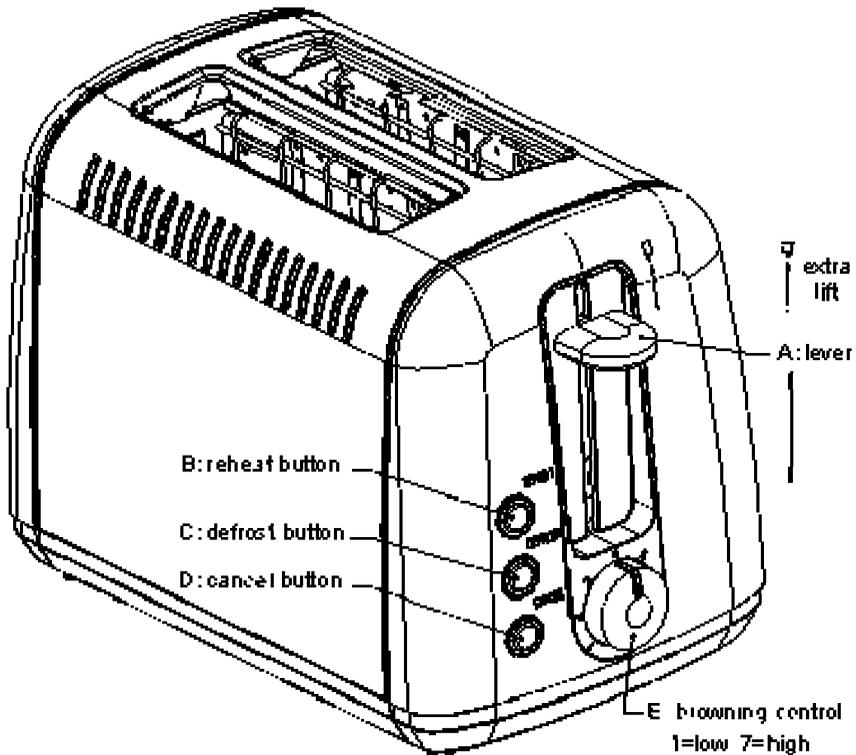

## Controls and parts

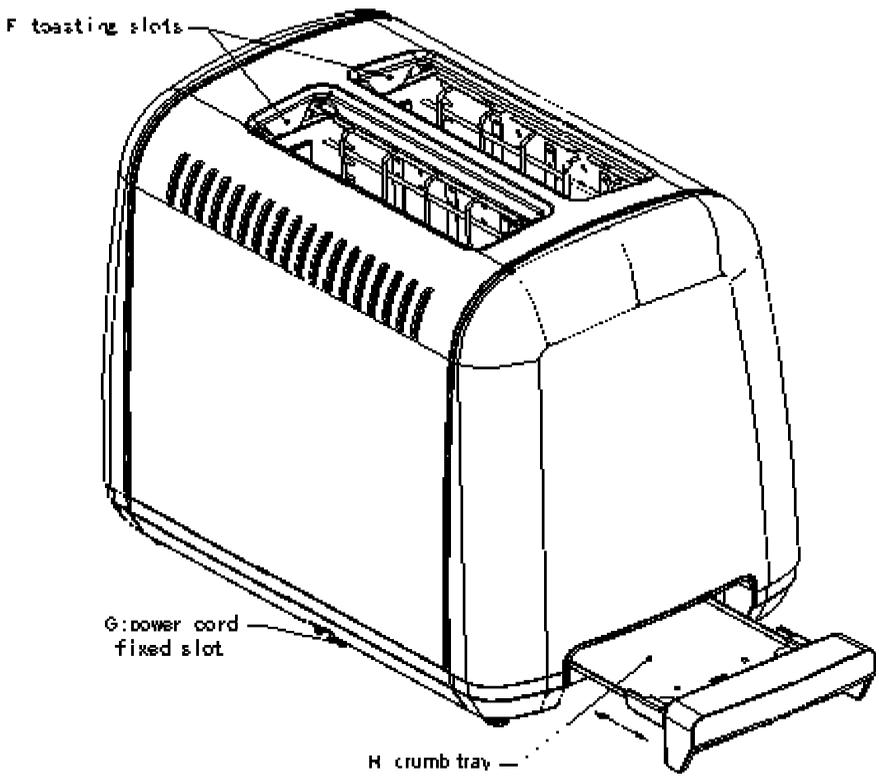

The manufacturer strives for continuous improvement. For this reason, the text and illustrations in this manual are subject to change without notice.

If the appliance is damaged in any way do not use it. Report the damage to your dealer who will take the necessary corrective action.

## 1 Safety and set-up

---

Read the instructions thoroughly before using the appliance! Follow all safety instructions in order to avoid damages due to improper use! Keep the manual for future reference. If this appliance is given to a third party, this manual must also be handed over.

- This appliance is intended for private domestic use only and is not suitable for professional catering purposes. It must not be used for commercial use.
- Do not use the appliance for anything other than its intended use. The Toaster is designed for toasting and warming bread and buns only.
- Do not use the appliance outdoors or in the bathroom.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull out the plug.
- For additional protection, this appliance should be connected to a household faulty current protection switch with no more than 30 mA. Consult your electrician for advice.
- Do not immerse the appliance, power cord or power plug in water or in other liquids. Do not hold it under running water, do not clean parts in a dish washer.
- Disconnect the power plug after using the appliance, before cleaning the appliance, before leaving the room or if a fault occurs.
- Do not disconnect the plug by pulling on the cord.
- Do not wrap the power cord around the appliance.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage. Keep the cord away from hot surfaces and open flames.
- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Our Household Appliances meet applicable safety standards, if the appliance or power cord is damaged, it must be repaired or replaced by the dealer, a service centre or a similarly qualified, authorized service person to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- Always keep the appliance out of the reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance unattended while it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.
- Before using the appliance for the first time, clean all parts. Please see details in the "Cleaning and care" section.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

## Safety and set-up

---

- Dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Never operate or place any part of this appliance on or near to hot surfaces such as a gas burner, electric burner or heated oven.
- Bread can catch fire if overheated. Never use the appliance in or near combustible and inflammable places, materials and furniture. Do not let the appliance come into contact with or become covered by inflammable materials such as curtains, textiles, walls, etc.
- Do not use paper, cardboard, plastic in or under the appliance.
- Use bread slices which are suitable for the bread slots.
- Operate the appliance with delivered parts only.
- Do not use the appliance with damp or wet hands.
- Always use the appliance on a stable, flat, clean, dry and non slip surface.
- Ensure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Position the appliance in such a way that the plug is always accessible.
- Avoid touching hot surfaces as the outer casing becomes warm during use. There is the danger of burning.
- Do not stick any foreign objects onto the appliance.
- This appliance must not be operated with an external clock timer or separate remote control system.
- Do not toast the bread with extremely runny ingredients such as butter.
- When using for the first time, smoke can develop due to production residues. This does not mean the appliance is defective. The first time you switch it on, use the appliance as you normally would, but without bread. Ensure the room is well ventilated.
- To avoid the risk of fire, frequently remove crumbs from the crumb tray.
- Do not use the toaster without the crumb tray in place.
- Do not use this product with any foods containing sugar, jam or preserves.
- Do not attempt to extract any jammed toast, muffins, bagels, bread or any other item with a knife or any other object, as contact with live elements may cause an electric shock.
- If the toaster begins to emit smoke during operation, immediately stop the toasting process. If bread gets stuck in the toaster always unplug the appliance before removing the bread. Be careful as the bread may be very hot.
- The toaster can only be switched on when the plug is connected to a wall socket.
- Do not use any tools or objects in the appliance. Metal objects could cause short circuits or electric shock. Do not damage the heating elements and mechanics of the toaster.
- Do not use the appliance as a source of heat.
- Do not attempt to dislodge bread when the appliance is switched on.
- Always unplug from the wall socket when not in use and before cleaning.

## 2 Operation

### Preparation

- 1 Remove all packaging and sticker materials and dispose of them according to applicable local regulations.
- 2 Before using the appliance for the first time, clean the appliance (See the "Cleaning and care" section).
- 3 Make sure that the appliance is in an upright position and on a stable, flat, clean, dry and non-slip surface.

### Note

When using the appliance for the first time, smoke can develop due to production residues. This does not mean the appliance is defective.

### Before using for the first time

- Set the browning level to maximum (7).
- Operate the appliance empty, to cure the new elements.
- This may smell a bit, this is normal and is nothing to be concerned about.
- Ensure the room is well ventilated.

### Toasting bread

1. Place the toaster upright on a firm, level, heat resistant surface.
2. Place the plug into the power socket.
3. Turn the browning control to the required setting (1 = low, 7 = high).
4. Place bread into the toasting slots (maximum thickness 27mm).
5. Press the lever down fully. Note: The lever will not stay down unless the toaster is connected to the electricity supply.
6. The "CANCEL" light will glow, and the elements will heat up.
7. When toasting is completed the toast will pop up.



**Caution:** Be very careful when taking the toast slices out of the toaster as the metal parts of the toaster and the bread can become very hot.



**CAUTION:** If toast slices get stuck in the toaster, switch the toaster off immediately by pressing the cancel button.

Remove the power plug out of the wall socket. Let the toaster cool down completely.

Carefully try to take the bread out of the toaster without damaging the sensitive heating elements and other parts. Do not use any electro conductive objects to remove the bread from the toaster.

### Cancel

To stop toasting, press the cancel button.

### Defrost

Adjust the browning level to your favoured setting, insert the frozen bread, lower the lever, then press the defrost button.

The defrost light will glow, and the toasting time will be altered automatically to give the same degree of browning as with unfrozen bread.

### Reheat

Adjust the browning control to your favoured setting, insert the bread, lower the lever, then press the reheat button.

The reheat light will glow, and the toast will be given a short burst of heat.

Don't reheat "battered", torn, or "out of shape" bread.

### Hints and tips

Old (yesterday's) bread has less moisture, so makes crisper toast.

Old bread, thin slices, and sweet bread products (tea cakes, fruit loaf, etc.) brown faster – use a lower setting.

### 3 Information

#### Cleaning and care

##### Caution

Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.

Never put the appliance or power cord in water or any other liquids.

- 1 Turn the appliance off and disconnect it from wall socket.
- 2 Let the appliance cool down completely.
- 3 Remove the crumbs after each use by pulling out the crumb tray. Clean the crumb tray with a damp cloth only. Before pushing back the crumb tray in the appliance make sure that the tray is dry. Do not let bread crumbs accumulate inside the toaster, they may cause a fire.
- 4 Turn the toaster upside down and shake it slightly to remove bread crumbs from inside.
- 5 Use a damp soft cloth and a small mild cleanser to clean the housing of the appliance. Dry the housing thoroughly.

##### Note

Before using the appliance after cleaning, dry all parts carefully using a soft towel.

##### Storage

If you do not plan to use the appliance for a long period of time, please store it carefully. Make sure the appliance is unplugged, cooled down and completely dry. Store the appliance in a cool, dry place. Make sure the appliance is kept out of the reach of children.



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection centre for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centres.

Help protect the environment by recycling used appliances.



##### Technical data

**Power supply:** 220-240 V~, 50 Hz  
**Power:** 900 W

**Technical and design modifications reserved.**

Record in the space below the listed information for future reference.

SERIAL NUMBER.....

DATE OF PURCHASE.....

PURCHASED FROM.....

.....

Please register your product at

**www.defy.co.za**

DEFY APPLIANCES (PTY) LTD

P.O.BOX 12004

JACOBS

DURBAN

4026

SOUTH AFRICA

## Branches

If you have followed the instructions and still have a problem, contact the customer care line on 086 100 3339. They will be able to advise you on any aspect of the appliance.

### South African Branches:

#### **BLOEMFONTEIN**

Unit Number 5  
Monument Business Park  
50 Monument Road  
Oranjesig, Bloemfontein  
[Bloemfontein.Service@defy.co.za](mailto:Bloemfontein.Service@defy.co.za)

#### **CAPE TOWN**

5A Marconi Rd. Montague Gardens, 7441  
[CapeTown.Service@defy.co.za](mailto:CapeTown.Service@defy.co.za)

#### **DURBAN**

135 Teakwood Road, Jacobs,  
Durban, 4052  
[Durban.Service@defy.co.za](mailto:Durban.Service@defy.co.za)

#### **EAST LONDON**

Robbie de Lange Road, Wilsonia,  
East London, 5201  
[EastLondon.Service@defy.co.za](mailto:EastLondon.Service@defy.co.za)

#### **GAUTENG, MIDRAND**

127 15th Road, Cnr Pharmaceutical & 15th Rd,  
Midrand, Gauteng  
[Gauteng.Service@defy.co.za](mailto:Gauteng.Service@defy.co.za)

#### **POLOKWANE**

87 Nelson Mandela Drive, Superbia 0699  
[Polokwane.Service@defy.co.za](mailto:Polokwane.Service@defy.co.za)

#### **PORT ELIZABETH**

112 Patterson Road, North End, Port Elizabeth  
6001  
[PortElizabeth.Service@defy.co.za](mailto:PortElizabeth.Service@defy.co.za)

### Sub-Saharan Africa Branches:

#### **ZAMBIA: SOUTHGATE INVESTMENTS LTD**

Plot 1606, Sheki Sheki Road  
P.O. Box 33681  
Lusaka, 10101, Zambia  
Tel: +260 0211 242332/3  
Fax: +260 0211 242933  
[sgiservicecentre@microlink.zm](mailto:sgiservicecentre@microlink.zm)

#### **NAMIBIA: ATLANTIC DISTRIBUTORS (PTY) LTD**

10 Tienie Louw Street, Northern Industrial Area  
P.O. Box 21158, Windhoek, Namibia  
Tel: (061) 216162  
Fax: (061) 216134  
[atlantic@mweb.com.na](mailto:atlantic@mweb.com.na)

#### **ZIMBABWE: TRADECOMAFRICA**

Trade Com Africa, 183 Loreley Crescent  
Msasa, Harare, Zimbabwe  
Tel: +263 4 486165/6  
Cell: +263 772 469010  
Cell: +263 772 469011

#### **BOTSWANA: RAY MORGAN AGENCIES**

RMA Service Centre, Plot 48, East Gate  
Gaborone International Commerce Park  
Kgale View, Gaborone  
Botswana  
Tel: +267 390 3996 / 390 3912  
Fax: +267 318 7376  
Cell: +267 7134 6539  
[service@rma.co.bw](mailto:service@rma.co.bw); [raja@rma.co.bw](mailto:raja@rma.co.bw)

#### **SWAZILAND: LYNDS DISTRIBUTORS**

P.O Box 716, Mbabane, Swaziland, H100  
Tel: (00268) 2515 4310/8  
Fax: (00268) 2518 4318

#### **MOZAMBIQUE: COOL WORLD. LDA**

Rua da Resistencia No. 97B R/C  
Cell: +258 84 44 61 234  
[coolworldlda@hotmail.com](mailto:coolworldlda@hotmail.com)  
Nosso Show Room  
Av: da Industrias, Parcela No.735 \* 735A  
Machava, Maputo

## 5 Warranty

---

This certificate is issued by DEFY APPLIANCES (PTY) LIMITED manufacturers of Defy and Ocean products, hereinafter the Company, to the original purchaser only, of the appliance described on the certificate and shall constitute the only warranty given in respect of this appliance.

The Company warrants to the original purchaser that for a period of TWO YEARS from date of purchase the appliance is free from defect under normal domestic use, both in workmanship and material, subject to the following conditions.

1. Carry-in service. Small appliances are repaired in our service centres and are not collected from the customers home. Faulty units must be delivered to the purchasing dealer or to the nearest Company Service Centre for warranty repairs.
2. Vitreous enamelware, fuses and lamps are specifically excluded from these warranties. It is an express condition of these warranties that the purchaser takes due care and attention in the use and maintenance of the appliance. Abuse, misuse in conflict with operating instructions, connection to incorrect voltages and subjection to commercial use shall release the Company from its obligations.
3. This warranty shall become void and cease to operate if the appliance is dismantled by, or any repairs to the appliance are effected by any persons not duly authorised by the Company, or if substitute parts not approved by the Company are used in the appliance, or if the serial number of the appliance is removed.
4. The Company shall not be responsible for damages resulting from fire, flood, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance. The Company shall not be responsible for damages caused by insect and/or animal infestation.
5. The Company shall not be responsible for transportation or other costs other than those incurred within the provisions of Point 1 of this Certificate.
6. **For warranties in the Republic of South Africa and Sub-Saharan Africa, please contact the customer care line. Please refer to the previous page for respective South African branches and Sub-Saharan Africa branches.**
7. Where service is requested under warranty and no fault or defect can be found by the Company, all costs incurred will be for the purchaser's account.
8. This Certificate as well as your invoice will serve as proof of purchase. For the purpose of warranty, it will be essential to produce this Certificate and invoice. Failure to do so, will render the purchaser liable for service costs.

**KEEP THIS CERTIFICATE AND SALES INVOICE AS PROOF OF  
PURCHASE FOR WARRANTY PURPOSES.**