


**KM 630 S**  
**COFFEE MACHINE**



Believe in better

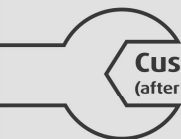

**Customer Care Line**  
(after sales service)

086 100 3339

**Small appliance**  
Instruction manual

## Read this manual before operation of the appliance!

Dear Customer,

Congratulations on the purchase of your new Defy appliance!

Please read this manual carefully before using your appliance for the first time and then store it within easy reach for future reference. We trust you will enjoy years of trouble free use.

### The user manual:

- This manual will provide you with information on how to safely operate and care for your appliance in order that you gain the maximum benefit from it.
- Pay particular attention to any safety instructions.

### Controls and parts



# 1 Safety and set-up

---

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damage due to improper use!

Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.

- This appliance is intended for private domestic use only and is not suitable for professional catering purposes. It must not be used for commercial purposes.
- Do not use the appliance in the bathroom.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull out the plug.
- For additional protection, this appliance must be connected to a residual current protection switch with more than 30 mA. Please contact an electrician for advice.
- Do not immerse the appliance, power cord, or power plug in water or any other liquids. Do not hold under running water and do not clean any parts in the dishwasher. Only the swivel filter holder and glass jug can be cleaned safely in the upper shelf of the dishwasher or with water and washing-up liquid.

- Disconnect the power plug after using the appliance, before cleaning the appliance, before leaving the room, or if a fault occurs. Do not disconnect the plug by pulling on the cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage.
- Keep the power cord away from hot surfaces and open flame.
- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Our Household Appliances meet applicable safety standards, if the appliance or power cord is damaged, it must be repaired or replaced by a service centre to avoid any dangers. Faulty or unqualified repair work may be dangerous and cause risk to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- Always keep the appliance out of the reach of children.

## Safety and set-up

---

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Before using the appliance for the first time, clean all parts carefully which come into contact with water or coffee. Please see full details in the “Cleaning and Care” section.
- Dry the appliance and all accessories before connecting it to mains supply and before attaching any parts.
- Never operate or place any part of this appliance on or near hot surfaces such as a gas burner, hotplate or heated oven.
- Do not use the appliance for anything other than its intended use. The coffee maker is designed for preparing coffee. Do not use the appliance to heat any other liquids or tinned, jarred, and bottled foods.
- Do not disconnect the plug by pulling on the cord.
- Do not wrap the power cord around the appliance.
- Never use the appliance in or near to combustible or inflammable places and materials.
- Operate the appliance with the delivered parts only.
- Do not use the appliance with damp or wet hands.
- Always use the appliance on a stable, flat, clean, dry, and non-slip surface.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- The appliance has to be positioned in such a way that the plug is always accessible.
- Avoid contact with hot surfaces and hold the glass jug by the handle only as there is the danger of burning. The glass jug becomes hot during use.
- Do not move the appliance while there is hot liquid in the glass jug or if the appliance is still hot.
- Do not open the cover or swivel filter holder during the brewing process.
- Never fill the appliance above the maximum level indicator. If it is filled above the maximum level, water flows out of the appliance through safety drainage.
- Never operate the appliance if brewing or keeping the coffee hot is not required.

## Safety and set-up

---

- Fill the appliance with cold and fresh drinking water only.
- Put water in the tank only when the appliance has been unplugged.
- The appliance should not be operated with an external clock timer or separate remote control system.
- Pour water in the water tank carefully.
- In case of any water splashes during water pouring, ensure that glass jug and heating platform are dry.
- Do not place the glass jug on the warm heating platform when the jug is empty.
- Use the glass jug only with the coffee maker.
- Never operate the appliance without water inside.
- Consult your healthcare professional prior to use of caffeinated products if you have or suspect a medical condition, are taking prescription drugs, or are pregnant or lactating. Caffeine may cause nervousness, irritability, sleeplessness, and occasionally, rapid heartbeat.



The manufacturer strives for continuous improvement. For this reason, the text and illustrations in this manual are subject to change without notice.



If the appliance is damaged in any way do not use it. Report the damage to your dealer who will take the necessary corrective action.

## 2 Operation

### Preparation

- 1 Remove all packaging and stickers and dispose them according to applicable legal regulations.
- 2 Before using the appliance for the first time, clean all parts which come into contact with water carefully. Please see full details in the "Cleaning and Care" section.
- 3 Make sure that the appliance is placed in an upright position and on a stable, flat, clean, dry, and non-slip surface.

### Brewing Coffee

- 1 Open the water tank cover **A** and fill the water tank **B** with drinking water. The water should not exceed the max. level marked on the water gauge **D** with the required amount of water, but do not fill past the "MAX" mark.

#### Note

Use only clean, cold, and fresh drinking water.

- 2 Add coffee powder into the filter. Usually a cup of coffee requires a level spoon of coffee powder but you may adjust according to personal taste. Then close the water tank cover **A**.

- 3 Place the glass jug **F** on the warming plate **G**.

- 4 Connect the plug to the wall socket. The LCD will display 12:00 o'clock with a flashing blue light.

- 5 Press the On/Off **L** button. The brewing process begins.

- 6 Remove glass jug **F** to serve when brewing is complete (about one minute later after the coffee stops dripping out).

- 7 Even after the process has finished you can keep the appliance energized. The coffee will be kept warm by the warming plate **G**. The appliance powers off automatically after 40 minutes if it has not been manually disconnected at the completion of brewing.

#### Notes

For an optimum coffee taste, serve it after brewing.

#### Caution:

If the **swivel filter holder is not closed or the glass jug F** is not placed accurately, the drip - stop function will not function properly. It could cause hot water or hot coffee to overflow.

#### Notes

The brewing process can be stopped at any time by pressing the On/Off **L** button.

#### Caution

Ensure that you place glass jug **F** on the warming plate **G** quickly (max. 30 seconds delay). Otherwise the brewed coffee from the filter could overflow.

If you want to use the glass jug **F** for more than 30 seconds, switch off the appliance. Never open the swivel filter holder during the brewing process, even if no water is draining from the filter. Extremely hot water or coffee can spill out from the swivel filter holder and cause injury. If water or coffee is not draining from the swivel filter holder, immediately unplug the appliance and wait 10 minutes before opening and checking the swivel filter holder.

When the brewing process ends and the water level indicator with MAX marking is empty, there will still be hot liquid in the swivel filter holder. Wait a few minutes for the rest of the liquid to drip into the glass jug **F**.

- 8 Remove the glass jug **F** from the warming plate **G**, as soon as the brewing process has finished and the glass jug **F** is filled. The coffee is ready for use.

- 9 To turn the appliance off, press the **L** button again.

– Switching the **L** button turns off the appliance.

- 10 Disconnect the appliance from the wall socket.

#### Note

If you want to continue the brewing process, repeat the procedure from 1 to 10. Let the appliance cool down at least 15 minutes between each brewing process.

## Operation

---

### Note

If you want to continue the brewing process, repeat the procedure from 1 to 10. Let the appliance cool down at least 15 minutes between each brewing process.

### Automatic Start Function

If you do not want the appliance to start immediately, you can set up the automatic start function. See the steps below 1-5:

**1** After you press the "programme" button **K** the clock will appear on the display.

**2** Press the "**H**" **I** and "**MIN**" **J** button continuously to set the present time.

### Note

The time cycle is 24 hours.

**3** Press the "program" button again until the word "timer" appears on the display.

**4** Set the starting time by pressing the "**H**" **I** and "**MIN**" **J** buttons.

**5** After you set up the timer press the **H** button. The indicator left will light up green.

**6** On the regulated time the left green light will go out and the right blue light will go on. The brewing process starts now. The appliance will power off automatically after 2 hours if it has not been manually disconnected at the completion of brewing.

### Hints and Tips

- Use softened or filtered water to prevent lime build-up.
- Store unused coffee in a cool, dry place. After opening a package of coffee, reseal it tightly to maintain its freshness.
- Do not reuse the coffee sediment in the filter since this will reduce the flavour.
- Reheating coffee is not recommended as coffee is at its peak flavour immediately after brewing.

Record in the space below the listed information for future reference.

SERIAL NUMBER.....

DATE OF PURCHASE.....

PURCHASED FROM.....

.....

Please register your product at

**www.defy.co.za**

DEFY APPLIANCES (PTY) LTD

P.O.BOX 12004

JACOBS

DURBAN

4026

SOUTH AFRICA

### 3 Information

#### Cleaning and care

##### Caution

Never use petrol, solvents, abrasive cleaners, or metal objects and hard brushes to clean the appliance.

Never put the appliance or power cord into water or any other liquid.

**1** Turn the appliance off and disconnect it from the wall socket.

**2** Allow the appliance to cool down.

**3** Remove the glass jug **F**.

**4** Clean all detachable parts after each use in hot, sudsy water.

**5** Use a damp soft cloth and some mild cleaner to clean the exterior of the appliance.

**6** Place the glass jug **F** onto warming plate **G**.

##### Note

Before using the appliance after cleaning, dry all parts carefully with a soft cloth or paper towel.

#### Descaling the appliance

Descaling extends the life of your appliance. Descale your coffee machine at least 4 times per year. The period depends on the water hardness in your area. The harder the water is, the more often the appliance needs to be descaled.

**1** Purchase a suitable descaler from a speciality store. Ask for a descaler suitable for a coffee machine.

**2** Before starting the descaling process please read the manufacturer's package instruction thoroughly. Should the manufacturer's instructions differ from the ones listed below, then follow the manufacturer's instructions.

##### Note

You can also use white vinegar and lemon juice instead of a commercially available descaler.

**3** Fill the water tank **B** to the MAX marking and add descaler.

Mixing ratio: 4 parts water to 1 part descaler.

**4** Turn the appliance ON and allow approximately one large coffee cup to run through the appliance.

**5** Turn the appliance off.

**6** Let the mixture soak for about 15 minutes.

**7** Repeat steps 4 – 6.

**8** Now turn the appliance on and let the entire mixture run through.

**9** Fill the water tank **B** with cold, fresh drinking water and run all the water through.

**10** Repeat step **9** four times.

**11** Now you may brew coffee again.

#### Storage

If you do not plan to use the appliance for a long period of time, please store it carefully. Make sure the appliance is unplugged and completely dry. Store the appliance in a cool, dry place. Make sure the appliance is kept out of the reach of children.

#### Environmental note

This appliance has been made from high quality materials and parts which can be reused and are suitable for recycling. Do not dispose of the appliance with normal household waste at the end of its service life. Consult your local authorities for disposal information and facilities available.

**Help protect the environment by recycling used appliances.**

#### Technical data



This product conforms to the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

**Power supply:** 220-240 V~, 50/60 Hz

**Power:** 1000 W

**Max. water volume:** 1.8 L

**Technical and design modifications reserved.**



## Branches

If you have followed the instructions and still have a problem, contact the customer care line on 086 100 3339. They will be able to advise you on any aspect of the appliance.

### South African Branches:

#### **BLOEMFONTEIN**

Unit Number 5  
Monument Business Park  
50 Monument Road  
Oranjesig, Bloemfontein  
[Bloemfontein.Service@defy.co.za](mailto:Bloemfontein.Service@defy.co.za)

#### **CAPE TOWN**

5A Marconi Rd. Montague Gardens, 7441  
[CapeTown.Service@defy.co.za](mailto:CapeTown.Service@defy.co.za)

#### **DURBAN**

135 Teakwood Road, Jacobs,  
Durban, 4052  
[Durban.Service@defy.co.za](mailto:Durban.Service@defy.co.za)

#### **EAST LONDON**

Robbie de Lange Road, Wilsonia,  
East London, 5201  
[EastLondon.Service@defy.co.za](mailto:EastLondon.Service@defy.co.za)

#### **GAUTENG, MIDRAND**

127 15th Road, Cnr Pharmaceutical & 15th Rd,  
Midrand, Gauteng  
[Gauteng.Service@defy.co.za](mailto:Gauteng.Service@defy.co.za)

#### **POLOKWANE**

87 Nelson Mandela Drive, Superbia 0699  
[Polokwane.Service@defy.co.za](mailto:Polokwane.Service@defy.co.za)

#### **PORT ELIZABETH**

112 Patterson Road, North End, Port Elizabeth  
6001  
[PortElizabeth.Service@defy.co.za](mailto:PortElizabeth.Service@defy.co.za)

### Sub-Saharan Africa Branches:

#### **ZAMBIA: SOUTHGATE INVESTMENTS LTD**

Plot 1606, Sheki Sheki Road  
P.O. Box 33681  
Lusaka, 10101, Zambia  
Tel: +260 0211 242332/3  
Fax: +260 0211 242933  
[sgiservicecentre@microlink.zm](mailto:sgiservicecentre@microlink.zm)

#### **NAMIBIA: ATLANTIC DISTRIBUTORS (PTY) LTD**

10 Tienie Louw Street, Northern Industrial Area  
P.O. Box 21158, Windhoek, Namibia  
Tel: (061) 216162  
Fax: (061) 216134  
[atlantic@mweb.com.na](mailto:atlantic@mweb.com.na)

#### **ZIMBABWE: TRADECOMAFRICA**

Trade Com Africa, 183 Loreley Crescent  
Msasa, Harare, Zimbabwe  
Tel: +263 4 486165/6  
Cell: +263 772 469010  
Cell: +263 772 469011

#### **BOTSWANA: RAY MORGAN AGENCIES**

RMA Service Centre, Plot 48, East Gate  
Gaborone International Commerce Park  
Kgale View, Gaborone  
Botswana  
Tel: +267 390 3996 / 390 3912  
Fax: +267 318 7376  
Cell: +267 7134 6539  
[service@rma.co.bw](mailto:service@rma.co.bw); [raja@rma.co.bw](mailto:raja@rma.co.bw)

#### **SWAZILAND: LYNDS DISTRIBUTORS**

P.O Box 716, Mbabane, Swaziland, H100  
Tel: (00268) 2515 4310/8  
Fax: (00268) 2518 4318

#### **MOZAMBIQUE: COOL WORLD. LDA**

Rua da Resistencia No. 97B R/C  
Cell: +258 84 44 61 234  
[coolworldlda@hotmail.com](mailto:coolworldlda@hotmail.com)  
Nosso Show Room  
Av: da Industrias, Parcela No.735 \* 735A  
Machava, Maputo

**OTHER AREAS ARE SERVICED BY OVER 200 AUTHORISED SERVICE AGENTS.  
PLEASE CONSULT THE CUSTOMER CARE LINE ON 086 100 3339 FOR DETAILS.**

## 5 Warranty

---

This certificate is issued by DEFY APPLIANCES (PTY) LIMITED manufacturers of Defy and Ocean products, hereinafter the Company, to the original purchaser only, of the appliance described on the certificate and shall constitute the only warranty given in respect of this appliance.

The Company warrants to the original purchaser that for a period of ONE YEAR from date of purchase the appliance is free from defect under normal domestic use, both in workmanship and material, subject to the following conditions.

1. Carry-in service. Small appliances are repaired in our service centres and are not collected from the customers home. Faulty units must be delivered to the purchasing dealer or to the nearest Company Service Centre for warranty repairs.
2. Vitreous enamelware, fuses and lamps are specifically excluded from these warranties. It is an express condition of these warranties that the purchaser takes due care and attention in the use and maintenance of the appliance. Abuse, misuse in conflict with operating instructions, connection to incorrect voltages and subjection to commercial use shall release the Company from its obligations.
3. This warranty shall become void and cease to operate if the appliance is dismantled by, or any repairs to the appliance are effected by any persons not duly authorised by the Company, or if substitute parts not approved by the Company are used in the appliance, or if the serial number of the appliance is removed.
4. The Company shall not be responsible for damages resulting from fire, flood, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance. The Company shall not be responsible for damages caused by insect and/or animal infestation.
5. The Company shall not be responsible for transportation or other costs other than those incurred within the provisions of Point 1 of this Certificate.
6. **For warranties in the Republic of South Africa and Sub-Saharan Africa, please contact your nearest Defy office. Please refer to the previous page for respective South African branches and Sub-Saharan Africa branches.**
7. Where service is requested under warranty and no fault or defect can be found by the Company, all costs incurred will be for the purchaser's account.
8. This Certificate as well as your invoice will serve as proof of purchase. For the purpose of warranty, it will be essential to produce this Certificate and invoice. Failure to do so, will render the purchaser liable for service costs.

**KEEP THIS CERTIFICATE AND SALES INVOICE AS PROOF OF  
PURCHASE FOR WARRANTY PURPOSES.**