

MOH 9328 B
MINI OVEN



Believe in better



Customer Care Line
(after sales service)

086 100 3339

Small appliance
Instruction manual

Contents

<u>1. Important Safety Instructions</u>	3	First cleaning of the appliance	10
General safety	3	Initial heating	11
Electrical safety	3	Tips for energy saving	11
Appliance safety	4	Future transportation	11
Intended use	5	Tips for baking	12
Safety for children	6	Tips for roasting	12
<u>2. General information</u>	7	<u>4. Maintenance and care</u>	13
Overview	7	General information	13
Technical Specifications	7	Cleaning the oven	13
		Caring for solid plates	13
<u>3. Installation</u>	8	<u>5. Trouble Shooting</u>	14
Before installation	8		
Package contents	8	<u>6. Branches</u>	15
Electrical installation	8		
Bake tray and wire rack	9	<u>7. Warranty</u>	16
Controls	10		

Dear Customer,

This manual will provide you with information on how to operate and care for your oven to gain the maximum benefit from it.

Please read this manual carefully before using your oven for the first time and then store it within easy reach for future reference.

We trust you will enjoy years of trouble free use.

EXPLANATION OF SYMBOLS



Important information



Warning—Hazardous situations



Warning—Electric shock



Caution; Warning for fire hazard



Caution; Warning for hot surfaces

PLEASE REGISTER YOUR PRODUCT AT

www.defy.co.za

DEFY APPLIANCES (PTY) LTD

P.O.BOX 12004

JACOBS

DURBAN

4026

SOUTH AFRICA

1. Important safety instructions

This section contains safety instructions that will help you avoid risk of injury and damage. All warranties will become void if you do not follow these instructions.

General safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children must be supervised to prevent them from tampering with the appliance.
- Installation and repair procedures must always be performed by authorized service agents. The manufacturer shall not be held responsible for damages arising from procedures carried out by unauthorized persons which may also void the warranty. Before installation read the instructions carefully.
- Do not operate the appliance if it is defective or has any visible damage.
- Make sure that the appliance function controls are switched off after every use.

Electrical safety

- If the appliance has a failure, it should not be operated unless it is repaired by an authorized service agent. There is a risk of an electric shock!
- Never wash down the appliance with water! There is the risk of electric shock!
- The appliance must be disconnected from the mains during installation, maintenance, cleaning and repair procedures.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not trap the mains cable between the oven door and frame, do not route it over hot surfaces as the cable insulation may melt and cause a fire as a result of a short circuit.
- Any work on electrical equipment must only be carried out by authorized and qualified persons.
- In case of any damage, switch off the appliance and disconnect it from the mains. To do this, remove the plug from the wall socket.
- To protect against risk of electrical shock, do not immerse cord, plugs or cooking unit in water or other liquid.

- The rear surface of the oven gets hot when it is in use. Ensure that the electrical connection does not come into contact with the rear surface so as not to damage connections.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- To disconnect, remove plug from wall outlet.
- A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a long cord. An extension cord may be used with care, however, the marked electrical rating should be at least as great as the electrical rating of this appliance. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled by children or tripped over.
- AC power must be taken from a properly wired outlet. Insert the plug completely into the socket. If it is not, it could become abnormally hot. Do not use an electric light outlet. Never connect multiple plugs to the same outlet.

Appliance safety

- The appliance and its accessible parts become hot during use. Care must be taken to avoid touching heating elements inside the oven. Children must be kept away unless continually supervised.
- Be careful when using alcoholic drinks in dishes. Alcohol evaporates at high temperatures and may ignite and cause fire when coming into contact with hot surfaces.
- Never use the appliance when your judgment or coordination is impaired by the use of alcohol and/or drugs.
- Keep all ventilation slots clear of obstructions.
- Do not place any flammable materials close to the appliance as the sides may become hot during use.
- Do not heat closed tins and glass jars in the oven. The pressure build-up in the tin/jar may cause the tin/jar to burst.
- Do not place baking trays, dishes or aluminium foil directly onto the bottom of the oven. The heat accumulation may damage the bottom of the oven.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass as these may scratch the glass surface.

- Do not use steam cleaners to clean the appliance as this may cause an electric shock.
- Do not use the appliance if the front door glass has been removed or is cracked.
- Always use heat resistant oven gloves when putting in or removing dishes into/from the hot oven.
- Do not carry out any repairs or modifications on the appliance.

To prevent a fire hazard

- Ensure plug is well fitted into socket so that it does not spark.
- Do not extend or cut the power cable. Use only an original power cable. Do not use a damaged power cable.
- Ensure that there is no liquid or moisture on the socket where the appliance is plugged in.

Safety when working with electricity

- Defective electric equipment is one of the major causes of house fires
- Any work on electrical equipment and systems should only be carried out by authorized and qualified persons. If the appliance is damaged in any way, do not use it. Report the damage to your dealer, who will take the necessary corrective action.

- Make sure that the fuse rating is compatible with the appliance.

Intended use

- The appliance must only be used for domestic use and for the purposes for which it was designed. Commercial use will void the guarantee. This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.
- Do not use the appliance for warming plates, drying towels, dish cloths or similar textile products by hanging them on the oven door handle.
- The manufacturer shall not be liable for any damage caused by improper use or handling errors.
- The oven can be used for defrosting, baking and roasting food.
- Do not use outdoors.
- The use of accessory attachments, not recommended or sold by the appliance manufacturer, may cause hazards.
- Do not touch hot surfaces. Use handles or knobs.
- Do not allow the product to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during its use.


- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliances to the nearest authorized service facility for examination, repair, electrical or mechanical adjustment.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot substances.
- If the external flexible cable or cord of this appliance is damaged, it shall be exclusively replaced by the manufacture or his service agent or a similar qualified person in order to avoid a hazard.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- No user-serviceable parts inside. Refer servicing to qualified service personnel.

Safety for children

- Electrical appliances are dangerous to children. Keep children away from the appliance when it is operating and do not allow them to play with the appliance.
- Accessible parts of the appliance will become hot whilst the appliance is in use. keep children away until the appliance has cooled down.
- Do not place any items above the appliance that children may reach for.
- Ensure that packaging material is disposed of in a responsible manner. Plastic bags must be cut up to prevent children playing with them and accidentally suffocating.
- When the oven door is open do not load any heavy objects on it and do not allow children to sit on it. The appliance may overturn or the door hinges may be damaged.

2. General Information

Overview

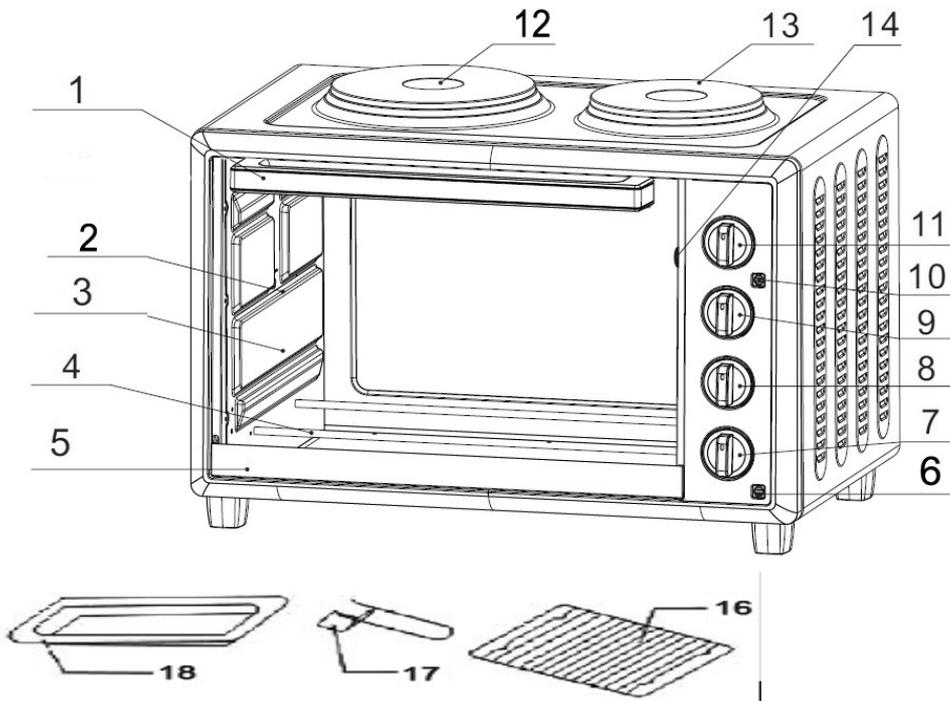

- | | | | |
|---------------------|-------------------------------|---------------------|-----------------|
| 1. Door handle | 6. Indicator light | 11. Thermostat knob | 16. Wire rack |
| 2. Rack support | 7. Timer knob | 12. Left hot plate | 17. Tray handle |
| 3. Door glass | 8. Switch knob | 13. Right hot plate | 18. Baking tray |
| 4. Heating elements | 9. Hot plate knob | 14. Panel | |
| 5. Door latch | 10. Hot plate indicator light | | |

Technical Specifications

Voltage / frequency	220-240V~ 50/60 Hz
Maximum power consumption	3250W

	WARNING Hot surfaces may cause burns! Do not touch the hot surfaces of the appliance. Use oven gloves. Keep children away from the appliance.
	DANGER Risk of fire by overheated oil! When heating oil, do not leave it unattended. Never try to extinguish a fire with water! When oil has caught fire, immediately cover the pot or pan with a lid. Switch off the hob if safe to do so and phone the fire service.



Figures in this manual are schematic and may not exactly match your appliance.

Values stated on the appliance labels or in the documentation accompanying it are obtained in laboratory conditions in accordance with relevant standards. Depending on operational and environmental conditions of the appliance, these values may vary.

Some models feature a protective film over stainless steel trim. This film must be carefully removed before using the appliance.

3. Installation

	Preparation of location and installation for the appliance is the customer's responsibility.
	DANGER: The appliance must be installed in accordance with all local electrical regulations.
	DANGER: Prior to installation, visually check if the appliance has any defects on it. If so, do not have it installed. Damaged appliances are a safety risk.
	AC power must be taken from a properly wired outlet. Insert the plug completely into the socket. If it is not, it could become abnormally hot. Do not use an electric light outlet. Never connect multiple plugs to the same outlet.

Before installation

Cooking appliances generate considerable heat. A safety distance must be left between the appliance and the kitchen walls and furniture.

- Surfaces, surrounding edges, synthetic laminates and adhesives immediately adjacent to the appliance should be able to withstand temperatures of up to 100°C without delaminating or discolouring.

	Do not place the appliance next to refrigerators or freezers. The heat emitted by the appliance will lead to an increased energy consumption of cooling products.
	The door and/or handle must not be used for lifting or moving the appliance.
	Do not place any objects onto the appliance and move it in upright position.
	Check the general appearance of your appliance for any damages that might have occurred during transportation.

SAVE THESE INSTRUCTIONS

Final check

1. Connect the oven and switch on the power.
2. Check the functions.

	WARNING: Under no circumstances should the bake element be covered with aluminium foil. Nor should a pan or tray be positioned directly above the bake element. Doing so would reflect the heat from the bake element downwards. Heat to the oven would be restricted and overheating of the space below the element could result in damage to the oven.
	

Package contents

	Accessories supplied may vary depending on the appliance model. Not all accessories in the user manual may be in your appliance.
---	--

Electrical installation

This appliance must be earthed and the manufacturer and the seller do not accept responsibility for any damage due to incorrect installation or electrical connection.

	DANGER: Risk of electric shock, short circuit or fire by damage of the mains lead! The mains lead must not be clamped, bent or trapped or come into contact with hot parts of the oven. If the mains lead is damaged, it must be replaced by a qualified electrician.
	
	DANGER: Risk of electric shock! Before starting any work on the electrical installation, please disconnect the appliance from the mains supply.

Bake Tray and Wire Rack		
	Food (Ref. only)	How to use Tray Handle
Bake Tray (May also be used as a crumb tray.) 	Roast chicken wings, hamburger pattie, steak, cakes & other similar oven-cooked foods	
Wire Rack 	Baked potatoes, dry food	
Bake Tray and Wire Rack 	For food which may drip, e.g. boiled fish, etc.	


The trays are not perfectly square.

- Always use the food fork when inserting or removing the tray. Touching the tray will cause severe burns.
- When hot, do not apply water to the glass window. It may cause the glass to break.
- When unplugging the cord, always take hold of the plug itself. Never pull on the cord. Doing so could damage and break the wires inside the cord.
- Do not position the unit close to a gas burner or other source of high temperature . Do not direct an electric fan at the unit during use. Doing so could prevent correct temperature control.
- Do not wet the power cord.
- Never handle the unit with wet hands. Always unplug the cord after use, or whenever the unit is to be left unattended. A malfunction while the plug is inserted into the outlet could cause a fire.
- When cooking dishes which will splash oil, for example roast chicken, it is recommended to put 2 sheets of aluminum foil on a tray in order to minimize oil splashing.


	<p>Caution: Be careful when removing pudding and other hot liquids. Hot dishes and liquids will cause burns if they come into contact with your skin.</p>
---	--

Controls


1. Set the “Temperature Control” by turning clockwise to select the suitable temperature according to the dish that you are going to cook.

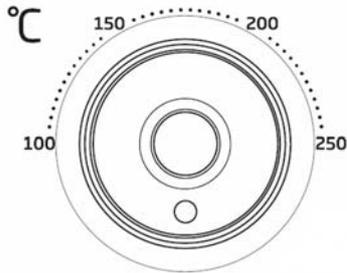


Set the “Timer” to the number which indicates the cooking time (minutes). The oven now begins to operate. Beware of HOT surfaces, and DO NOT open the glass door during cooking!

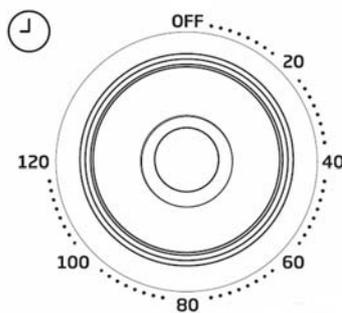

Hotplate Control

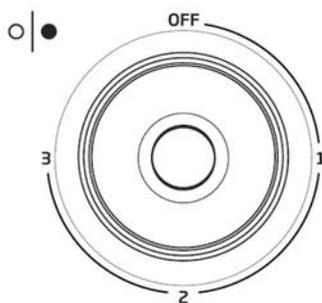

OFF	Power off
1	300W
2	450W
3	750W

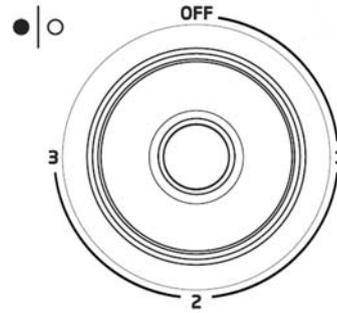

OFF	Power off
1	400W
2	600W
3	1000W

Note: When the timer and thermostat switch on together, the oven begins to

First cleaning of the appliance



Surfaces might get damaged by some detergents or cleaning materials. Do not use aggressive detergents, cleaning powders/creams or any sharp objects during cleaning. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in the glass shattering.

1. Remove all packaging materials.
2. Wipe the surfaces of the appliance with a damp cloth or sponge and dry with a cloth.



Smoke and smell may emit for a couple of hours during the initial operation. This is quite normal. Ensure that the room is well ventilated to remove the smoke and smell. Avoid directly inhaling the smoke and the smell that emits.

Initial heating

	WARNING. Hot surfaces cause burns! The appliance may be hot when it is in use. Never touch the inner sections of the oven, heaters etc. Keep children away. Always use heat resistant oven gloves when placing or removing dishes into/from the hot oven.
---	--

Before using the unit for the first time heat the empty oven.

1. Insert the tray and wire rack.
2. Set the heater operating switch to "UPPER & LOWER", set the temperature control dial to "220°C" and heat the empty oven for about 10 minutes and then switch it off. Any production residues or layers will be then be burnt off and removed. There may be some smoke and a burning smell at first, this is not a malfunction.

Temperature control dial:

Set the Temperature Control Dial for the dishes which you are going to cook.

Heat Operating Switch

An active front Indicator light shows that the oven is switched on and operating.

1. Set the arrow on the timer knob to the number which indicates the cooking time (minutes) according to the dish to be cooked.
2. Set the Timer by turning it clockwise. The oven will switch off automatically at the end of the selected time and a bell will ring. When setting the Timer to less than 5 min, turn it to more than 6 min. and then back to the selected time.
3. The oven can be turned off manually during cooking by turning the Timer counter-clockwise to the "OFF" position. If the inside of the oven is dirty, cooking may take slightly longer than usual.

	DANGER
	Risk of scalding by hot steam! Take care when opening the oven door as steam may escape.

Tips for saving energy

The following information will help you to use your appliance in an ecological way, and to save energy:

- Use dark coloured or enamel coated cookware in the oven since the heat transmission will be better.
- While cooking your dishes, perform a preheating operation if it is advised in the user manual or cooking instructions.
- Do not open the door of the oven frequently during cooking.
- Try to cook more than one dish in the oven at the same time whenever possible. You can cook by placing two cooking vessels onto the wire shelf.
- Cook more than one dish one after another. The oven will already be hot.
- You can save energy by switching off your oven a few minutes before the end of the cooking time. Do not open the oven door.
- Defrost frozen dishes before cooking them.

Future Transportation

- Keep the appliances original carton and transport the appliance in it. Follow the instructions on the carton. If you do not have the original carton, pack the appliance in bubble wrap or thick cardboard and tape it securely.
- To prevent the wire grill and tray inside the oven from damaging the oven door, place a strip of cardboard onto the inside of the oven door that lines up with the position of the trays. Tape the oven door to the side walls.
- Do not use the door or handle to lift or move the appliance.

Tips for baking

Use non-sticky coated appropriate metal plates or aluminum vessels or heat-resistant silicone moulds.

Make best use of the rack supports.

Place the baking mould in the middle of the shelf.

Select the correct shelf position before switching the oven on. Do not change the shelf position when the oven is hot.

Keep the oven door closed.

Tips for roasting

Treating whole chicken, turkey and large pieces of meat with dressings such as lemon juice and black pepper before cooking will increase the cooking performance.

It takes about 15 to 30 minutes longer to roast meat with bones when compared to roasting the same sized meat without bones. Each centimeter of meat thickness requires approximately 4 to 5 minutes of cooking time.


Leave meat in the oven for about 10 minutes after the cooking time is over. The juice is better distributed all over the roast and does not run out when the meat is cut.

Baking reference

Type of food	Number or thickness	Temp(°C)	Timer« (min.)
Sandwich	2-3 pcs	200	2-3
Toast	2-4 pcs	250	2-5
Hamburger	2-3 pcs	200	3-5
Fish	/	200	7-10
Sausage	3-4 pcs	200-250	8-10
Cake	/	150	20-30
Steak	1-2 cm	250	10-15
Chicken	Half chicken	175-200	30-40

If the oven is positioned too close to a wall, the wall may be burnt or stained. Keep the oven at the correct distance away from the wall to prevent a fire hazard.

- To prevent a fire hazard. never allow the product to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during its use.
- In order to prevent a fire hazard, never place anything between the bottom of the oven body and the surface on which it is set.

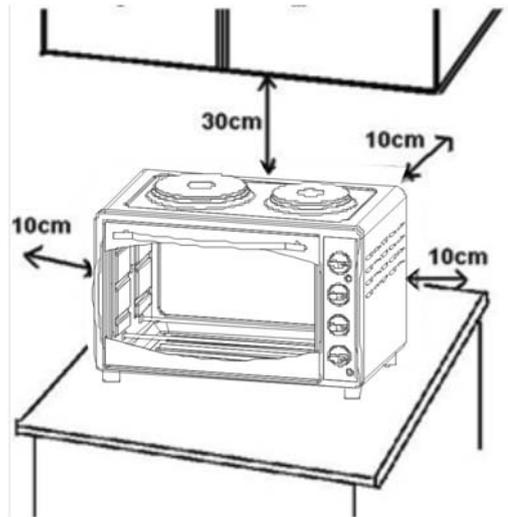

- Do not place anything on the oven while using it, the heat could cause deformation, cracking, etc.
- Never heat any bottled or tinned food directly as the bottle or tin may explode or break and scald the person.
- Be careful not to bum yourself during use or immediately after use.
- The metal parts and glass window of the door become extremely hot during use.
- Be careful not to touch metal parts or the glass window when opening and closing the door.



DANGER:

Be careful when opening the oven door as steam may escape. Exiting steam can scald your hands, face and/or eyes

4. Maintenance and care

General information

- Clean the appliance thoroughly after each use, making it easier to remove cooking residues and helps prevent these from burning on the next use of the appliance.
- Remove the plug and allow the cooker to cool down before cleaning.
- Wipe down the cabinet, door, control panel, trims and handle with a damp, hot soapy cloth.
- Use only liquid household cleaners and avoid abrasive powders, scouring pads and caustic cleaners.
- Rinse and wipe down with a clean cloth.

Cleaning the oven

- Open the oven door and allow the oven to cool down.
- Clean the oven interior and exterior surface, tray, grid, with a damp, hot soapy cloth.
- It may be necessary to soak burnt soils with a liquid cleaner to soften them before scrubbing them with a nylon brush or scouring sponge.
- Heavy soils on the bottom of the oven may require overnight soaking under a sponge liberally sprinkled with household ammonia. Remove the soil the following morning by washing normally, Then wash with clean water
- Always ensure that any excess liquid is thoroughly wiped off after cleaning and any spillage is immediately wiped dry.
- Do not use cleaning agents that contain acid or chloride to clean the stainless or inox surfaces and the handle. Use a soft cloth with a liquid detergent (not abrasive) to wipe these parts clean, paying attention to sweep in one direction.

	Do not use steam cleaners for cleaning, there is a risk of an electric shock.
	DANGER: Risk of electric shock! Switch off the electricity before cleaning the appliance to avoid an electric shock.

	DANGER: Hot surfaces may cause burns! Allow the appliance to cool down before you clean it.
	The surface may get damaged by some detergents or cleaning materials. Do not use aggressive detergents, cleaning powder/cream or any sharp objects. Do not use any harsh abrasive cleaners, hard brushes or sharp metal scrapers to clean the oven door and glass since they can scratch the surface, destroy the glass and could result in the glass shattering.

Caring for solid plates

- To prevent blotchy discolouration and corrosion, moisture from splatters and spills should be cleaned off immediately.
- To clean the plates, wipe with a damp cloth or nylon pad. A little liquid detergent may be used. Do not use metal scourers or sharp metal objects.
- After cleaning, dry the plates by switching them on for a short while.
- To prevent rust, periodically apply some, sewing machine oil or electrical hotplate polish - available from Defy spares. Extra attention is required in areas of high humidity or in close proximity to the sea.
- Use only pots with a solid level base. An uneven base can prolong cooking times and waste energy.
- Use pots with a base diameter slightly larger than the plate. This will ensure even heat distribution and prevent spillage from dripping onto and staining the hot plate.
- Always cover the pot with a lid. This will conserve energy and minimise spillage.
- Thermal shock could damage the plates. Do not put cold pots on very hot plates.

	The warranty does not cover the replacement or repair of rusted or corroded solid plates. It is the owners responsibility to care for them as described above.
---	--

5. Troubleshooting

<i>Oven emits steam when it is in use.</i>	
It is normal that steam escapes during operation	>>> This is not a fault.
<i>The appliance emits metal noises while heating and cooling.</i>	
When the metal parts are heated, they may expand and cause noise.	>>> This is not a fault.
<i>The appliance does not operate.</i>	
The appliance is not plugged into the wall socket.	>>> Check the plug connection.
<i>Oven light does not work.</i>	
Power is cut.	>>> Check if there is power. Check the fuses in the fuse box. If necessary, replace or reset the fuses.
<i>Oven does not heat.</i>	
Function and/or Temperature are not set.	>>> Set the function and the temperature with the Function and/or Temperature knob/key.

Owner's responsibility

Since the following are not factory faults, they are the owner's responsibility.

- Damage to exterior finish.
- Breakage of glass and other components.
- Replacement of the light bulb.
- Damage through improper use or installation of the appliance.
- Damage caused by moving the appliance.

	<p>If you have followed the instructions and still have a problem, contact the customer care line. They will be able to advise you on any aspect of the product or send a qualified technician to repair it. Never attempt to repair a defective appliance yourself.</p>
	<p>Remember that you may be charged for a service call even during the warranty period if the fault is due to not following the instructions as outlined in this user manual.</p>

6. Branches

If you have followed the instructions and still have a problem, contact the customer care line on 086 100 3339. They will be able to advise you on any aspect of the appliance.

South African Branches:

BLOEMFONTEIN

Unit Number 5
Monument Business Park
50 Monument Road
Oranjesig, Bloemfontein
Bloemfontein.Service@defy.co.za

CAPE TOWN

5A Marconi Rd. Montague Gardens, 7441
CapeTown.Service@defy.co.za

DURBAN

135 Teakwood Road, Jacobs,
Durban, 4052
Durban.Service@defy.co.za

EAST LONDON

Robbie de Lange Road, Wilsonia,
East London, 5201
EastLondon.Service@defy.co.za

GAUTENG, MIDRAND

127 15th Road, Cnr Pharmaceutical & 15th Rd,
Midrand, Gauteng
Gauteng.Service@defy.co.za

POLOKWANE

87 Nelson Mandela Drive, Superbia 0699
Polokwane.Service@defy.co.za

PORT ELIZABETH

112 Patterson Road, North End, Port Elizabeth
6001
PortElizabeth.Service@defy.co.za

Sub-Saharan Africa Branches:

ZAMBIA: SOUTHGATE INVESTMENTS LTD

Plot 1606, Sheki Sheki Road
P.O. Box 33681
Lusaka, 10101, Zambia
Tel: +260 0211 242332/3
Fax: +260 0211 242933
sgiservicecentre@microlink.zm

NAMIBIA: ATLANTIC DISTRIBUTORS (PTY) LTD

10 Tienie Louw Street, Northern Industrial Area
P.O. Box 21158, Windhoek, Namibia
Tel: (061) 216162
Fax: (061) 216134
atlantic@mweb.com.na

ZIMBABWE: TRADECOMAFRICA

Trade Com Africa, 183 Loreley Crescent
Msasa, Harare, Zimbabwe
Tel: +263 4 486165/6
Cell: +263 772 469010
Cell: +263 772 469011

BOTSWANA: RAY MORGAN AGENCIES

RMA Service Centre, Plot 48, East Gate
Gaborone International Commerce Park
Kgale View, Gaborone
Botswana
Tel: +267 390 3996 / 390 3912
Fax: +267 318 7376
Cell: +267 7134 6539
service@rma.co.bw; raja@rma.co.bw

SWAZILAND: LYNDS DISTRIBUTORS

P.O Box 716, Mbabane, Swaziland, H100
Tel: (00268) 2515 4310/8
Fax: (00268) 2518 4318

MOZAMBIQUE: COOL WORLD. LDA

Rua da Resistencia No. 97B R/C
Cell: +258 84 44 61 234
coolworldlda@hotmail.com
Nosso Show Room
Av: da Industrias, Parcela No.735 * 735A
Machava, Maputo

7. Warranty

This certificate is issued by DEFY APPLIANCES (PTY) LTD manufacturers of Defy and Ocean products, hereinafter the Company, to the original purchaser only, of the appliance described on the certificate and shall constitute the only warranty given in respect of this appliance.

The Company warrants to the original purchaser that for a period of ONE YEAR from date of purchase the appliance is free from defect under normal domestic use, both in workmanship and material, subject to the following conditions.

1. Repair or replacement of any part of this appliance, found by the Company to be defective, shall be at the election of the Company. The Company reserves the right to effect such service through any of its Service Divisions or Authorised Service Dealers. The cost of such service shall be borne by the Company in full, provided that the appliance is located no further than 50 km from a Company Service Centre or an Authorised Service Dealer. Where the appliance is located beyond the 50 km radius, the purchaser shall be liable for the standard travelling charges, as determined by the Company.

CARRY IN SERVICE Microwave ovens, Compact cookers and small appliances are repaired in our service centres and are not collected from the customers home. Faulty units must be delivered to the purchasing dealer or to the nearest Company Service Centre for warranty repairs.

2. Rusted or corroded plates, vitreous enamelware, fuses and lamps are specifically excluded from these warranties. It is an express condition of these warranties that the purchaser takes due care and attention in the use and maintenance of the appliance. Abuse, misuse in conflict with operating instructions, connection to incorrect voltages and subjection to commercial use shall release the Company from its obligations.

3. This warranty shall become void and cease to operate if the appliance is dismantled by, or any repairs to the appliance are effected by any persons not duly authorised by the Company, or if substitute parts not approved by the Company are used in the appliance, or if the serial number of the appliance is removed.

4. The Company shall not be responsible for damages resulting from fire, flood, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance. The Company shall not be responsible for damages caused by insect and/or animal infestation.

5. The Company shall not be responsible for transportation or other costs other than those incurred within the provisions of Point 1 of this Certificate.

6. For warranties in the Republic of South Africa and Sub-Saharan Africa, please contact the customer care line. Please refer to the previous page for respective South African branches and Sub-Saharan Africa branches.

7. Where service is requested under warranty and no fault or defect can be found by the Company, all costs incurred will be for the purchaser's account.

8. This Certificate as well as your invoice will serve as proof of purchase. For the purpose of warranty, it will be essential to produce this Certificate and invoice. Failure to do so, will render the purchaser liable for service costs.

KEEP THIS CERTIFICATE AND SALES INVOICE AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.